


Bischoff & Bischoff

Instruction manual

Orbis




Enjoy mobility. 

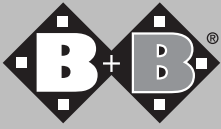

Contents:

1	Preface	4
	1.1 Signs and symbols	
	1.2 Information on driving on public roads	
2	Important safety instructions	6
	2.1 General safety instructions	
	2.2 Information on EMC interference	
	2.3 Brakes	
	2.4 Safety in vehicles	
	2.5 Travelling in traffic	
	2.6 Purpose	
	2.7 Indications	
	2.8 Contraindications	
	2.9 Declaration of Conformity	
3	Overview of product and accessories	10
	3.1 Checking the delivery	
	3.2 Package	
	3.3 Overview	
	3.4 Basic adjustments	
	3.4.1 Steering column	
	3.4.2 Seat	
	3.4.3 Back rest	
	3.4.4 Arm rests	
	3.4.5 Seat belt	

4	Using the scooter	16
	4.1 Description of controls	
	4.2 Entering and leaving	
	4.3 Driving the scooter	
	4.4 Pushing the scooter	
5	Technical Data	20
6	User care instructions	21
	6.1 Cleaning and disinfection	
	6.2 Checking the brake system	
	6.2.1 Service brake	
	6.2.2 Drum brake	
	6.3 Lighting system	
	6.4 Battery	
	6.4.1 Charging	
	6.4.2 Replacing batteries	
7	Maintenance instructions for dealers	25
8	Disposal	26
9	Transfer of the scooter	26
10	Maintenance	26
11	Warranty	26
12	Warranty – certificate	27

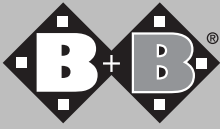

1. Preface

Dear user,

You have selected a high-quality scooter from Bischoff & Bischoff. Thank you for your trust in our products. The scooter has been designed to offer you many advantages and to meet your requirements. The wide range of adjustment options and the ease of setting the seat height, back rest angle and the distance to the handlebars makes it easy to adjust the scooter to fit your body size exactly.

The scooter is designed exclusively for use outdoors. Please read the instruction manual carefully before operating your new scooter for the first time. The manual is an integral and important component of the scooter. Keep it where you can refer to it and if you sell the scooter give the manual to the new owner.

Repairs and adjustments require special technical training and must therefore be conducted only by dealers authorised by Bischoff & Bischoff.

1.1 Signs and symbol



Caution! Indicates specially safety-relevant instructions. Follow instruction manual.




Important! Indicates specially useful information in the specific context.

1.2 Information on driving on public roads

You can drive the scooter on footpaths, and if they are not available you can drive on the road. Adjust your speed to the road conditions and the traffic. You can also drive on combined cycle paths and footpaths outside built-up areas. In pedestrian zones or on footpaths you must drive at walking pace for safety.

Our scooters are designed to have a maximum speed of 15 km/h and therefore they do not require registration or a permit. A driving licence or certificate of passing a test are also not required. Operators must be at least 15 years old, familiar with the basic regulations governing traffic and capable of controlling a vehicle safely in traffic. Young people and children under 15 years are restricted to a maximum speed of 10 km/h.

Scooters and motorised wheelchairs must be fitted with a rear reflector approved under Sec. 18 Part 2 No. 5 Road Traffic Regulations in accordance with ECE-R 69 on the back of the vehicle. Please make sure that reflectors are not obscured by bags or other objects.

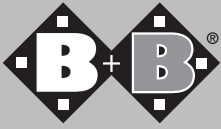

2. Important safety instructions

2.1 General safety instructions

To prevent falls and dangerous situations, you should start familiarising yourself with your new scooter on a level, open area. We recommend having someone accompany you at this stage.

Before operating the scooter please check that all attached parts are correctly fastened.

Before driving the scooter practise operating it on a level and open area. Practise braking and accelerating to familiarise yourself with the behaviour of the scooter under braking and acceleration in a straight line and in curves.

Please note that the stability of the scooter may be affected by movements of the body or the load and may increase the danger of tipping to one side.

The scooter must not be used to transport more than one person or any loads. Note the intended use.

Never operate the scooter under the influence of alcohol or other substances that may impair your attention and your physical and mental capacity.

Always use ramps to drive over obstacles.

Do not drive over an obstacle (step, curb) without using brakes.

Be aware that the scooter may tip over when driving over rough areas, lifts and ramps. Make sure that there is sufficient clearance above, below and to the sides.

The controls must always be switched off when you get on or off the scooter.

Always follow the traffic regulations on public streets. The lights on the scooter must always be visible to other traffic.

Wear bright, conspicuous clothing as much as possible. This will ensure that you are more visible to other traffic. For your own safety make sure that the rear reflector on the back of the

seat is always visible and not obscured by bags or other objects.

Please note that seat cushions that are exposed to direct sunlight may become hot and if they are touched may burn your skin. Cover these parts or protect the scooter from direct sunlight.



Only push the scooter on flat ground with the drive uncoupled.

The electro-mechanical brake is disconnected when pushing the scooter. If this precaution is not observed fatal injuries may occur.


2.2 Information on EMC interference

Even though our equipment complies with all applicable EMC Directives and standards, the scooter may be subject to electrical interference from other devices (e.g. mobile telephones) or may cause interference. If you become aware of any interference, switch off the other device or your scooter and move it away from the source of interference.

2.3 Brakes

The scooter is braked to a stop by the automatic brake when the speed control is released.

When pushing the scooter with the drive uncoupled the hand-brake levers with the parking brake function must be used.

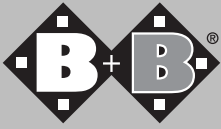

2.4 Safety in vehicles

Please note that the scooter must not be used as a seat in a vehicle. The user must transfer from the scooter to a standard vehicle seat.

The scooter must be secured to prevent movement with straps.

2.5 Travelling in traffic

The scooter is designed exclusively for use outdoors.

Please note that you will be using it on public roads among traffic and you must obey all traffic regulations at all times.

Do not endanger pedestrians by careless driving on footpaths.

2.6 Purpose

The scooter is designed exclusively for use by adults who have difficulty with walking.

It is capable of being used over long distances and overcoming minor obstacles outside. Under EN 12184 it is classified as Category C.

The maximum load capacity is 150 kg

2.7 Indication

Walking disability or serious difficulty in walking as a result of

- paralysis
- loss of limb
- defect or deformity in limbs
- joint contractures
- joint damage (not on both arms)
- other conditions

Use of scooters (or electric wheelchairs) is indicated if the use of manually operated wheelchairs is no longer possible because of handicaps but the person can still competently operate an electromechanically driven vehicle.


2.8 Contraindication

The use of scooters (or electric wheelchairs) is not suitable for persons

- with severe equilibrium disorders
- with reduced and inadequate vision
- with serious cognitive restrictions

2.9 Declaration of Conformity

Bischoff & Bischoff as manufacturer declare in sole responsibility that the Orbis scooter conforms to the requirements of Directive 93/42/EEC.

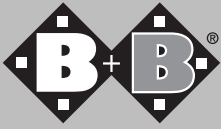

3. Overview of product and accessories

3.1 Checking the delivery

All B+B products are given a final inspection before they leave our factory and the CE mark is attached.

The scooters are supplied in a special carton. After unpacking the scooter, keep the carton if possible. It can be used for subsequent storage or return of the product.

The product is supplied by a qualified dealer in medical products, which also instructs the user in the operation of the device.

If the scooter is delivered by rail or road transport it must be inspected immediately for transport damage in the presence of the delivery person (carton). If any damage is found, please contact our customer service department immediately (tel.: + 49 7248 9209-2).

Check the contents of the package for completeness and damage. If irregularities and damage are found please contact our customer service department immediately (tel.: + 49 7248 9209-2).

3.2 Package

Check the contents of the package for completeness immediately on receipt. The package contains:

- packaging material
- scooter (ready for use with 2 batteries)
- battery charger
- tool kit
- air pump
- instruction manual
- rear reflector as required by ECE-R 69

3.3 Overview



fig. 1

3.4 Adjustment

Before using the scooter for the first time it must be adjusted to fit you. This is essential to ensure that your posture is physiologically correct for extended use without excessive fatigue. The basic adjustments of the scooter are described below. You should have all adjustments made by your dealer.

3.4.1 Steering column

The steering column of the scooter can be adjusted to make it comfortable for you. You can adjust it while seated in the driver's seat.

- Hold the handlebar with one hand and pull the adjusting lever towards you with the other hand.
- Move the steering column to the desired position and then release the lever.
- The steering column is infinitely adjustable from 0° (upright) to 90° (horizontal for transport).
- When the lever is released, the steering column is fixed in the desired position.



fig. 2

3.4.2 Seat

The height of the seat can be adjusted and it can also be moved forward and back and also rotated to the side. While the height of the seat is normally only ever adjusted once, the other adjustments can be made while seated on the seat.

Rotating seat

- Pull the lever (left under the seat) towards you. The seat can be rotated in either direction.
- It can be locked every 45°.
- Release the lever and make sure that the seat is locked in position.



fig. 3

Moving seat

- Pull the lever (right under the seat) towards you. The seat can be moved forward and back.
- You can adjust the seat to the desired position.
- Release the lever and make sure that the seat is locked in the closest fixed position.

Seat height

Zuerst müssen Sie den Sitz und die Verkleidung entfernen.

First remove the seat and the cover.

- Pull the lever (left under the seat) completely up until it is unlocked and remove the seat.
- Unscrew the screws holding the cover in place and remove it completely.
- Loosen the handwheel (do not unscrew completely) and unscrew the socket screw.
- Position the "saddle support" in the desired position.
- Tighten the socket screw and the handwheel again.

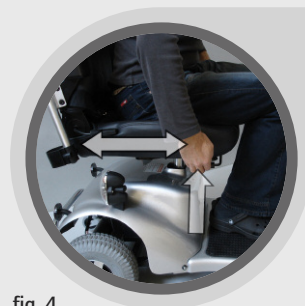


fig. 4



fig. 5

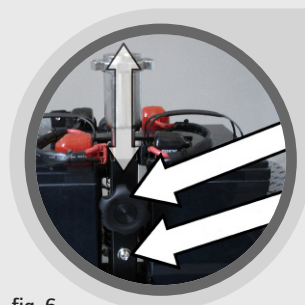


fig. 6

3.4.3 Back rest

The back rest of your scooter can be folded forward and back. The adjustment angle to the back can also be restricted.



fig. 7

Back adjustment

- Pull the lever (right under the seat) upwards. The back rest now presses forward.
- Move the back rest back to the desired position.
- Release the lever and make sure that the back rest is locked again.

Limiting the back adjustment

- Unscrew the socket screw on the left hinge of the seat back.
- Position the socket screw where you want to limit the movement of the back rest.
- Tighten the socket screw.



fig. 8

3.4.4 Arm rests

The arm rests can be folded back to make it easier for the user to sit on and leave the seat. The rest position of the arm rests can also be adjusted.



fig. 9

Arm rest angle

- Turn the screw under the arm rest to set the required angle of the arm rest.

3.4.5 Seat belt

The seat belt is attached to the sides of the frame.

- Adjust the length of the seat belt to your requirements by positioning the buckle for comfort.
- Lock the belt with the buckle.
- Unlock the belt by pressing the red button on the buckle.



fig. 10

4. Using the scooter

When you have adjusted the scooter to fit you, it is now time to familiarise yourself with the functions of the controls.

4.1 Description of controls

The control panel is part of the steering column of your scooter. It contains LED indicators and controls.

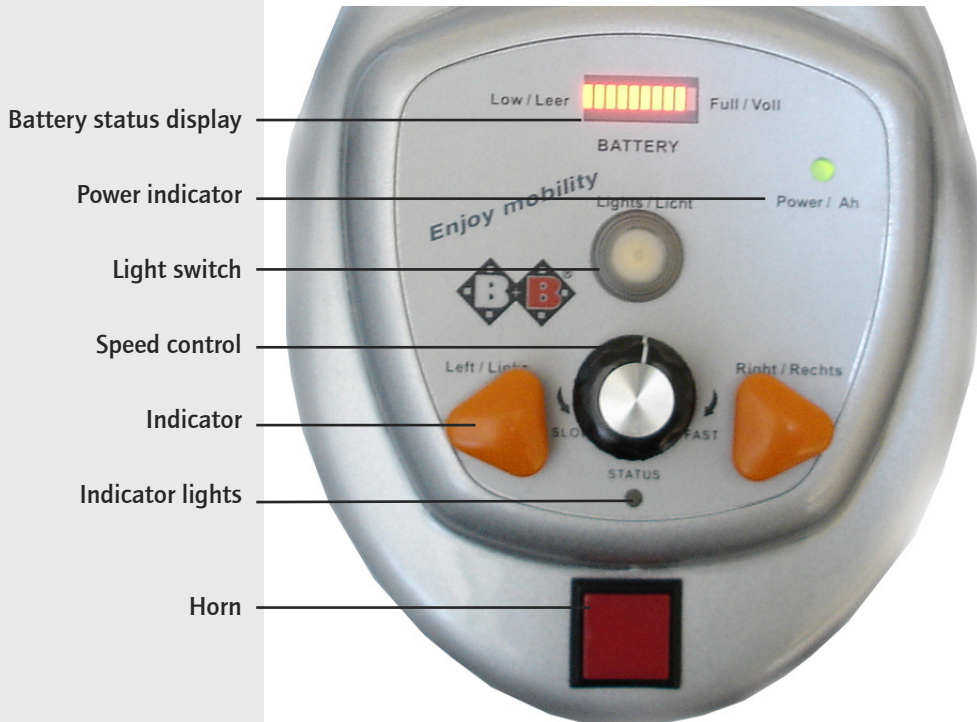


fig. 11

The ignition key is in the front of the steering console.

4.2 Entering and leaving

Make sure that the scooter is switched off before sitting on it.

- Set the steering column to the upright position, as described above, and swing the arm rest backwards to the side.
- It is easier to sit on the scooter by turning the seat 90° to the side (see the section on basic adjustments).
- Now sit down on the seat.
- Rotate the seat to the direction of travel or swing the arm rest forward.



Caution!

Make sure that the seat is locked again.

- Adjust the steering column so you can easily reach all controls.
- To get off the scooter proceed in reverse order. First remove the key from the ignition and make sure that the scooter will not move away. Operate the scooter for the first time in a spacious area.
- Make sure that you are correctly seated on your scooter. Keep the speed as low as possible. When you feel more secure with the scooter you can increase the speed.
- Please make sure that your thumbs are not on the forward / reverse lever when you switch on the scooter. This will cause your scooter to display an error message. Switch it off and on again to correct this error.

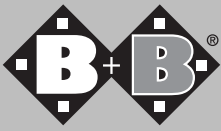


fig. 12




fig. 13



fig. 14

4.3 Driving the scooter

- Press the right throttle lever forward to move forward. The further forward you press the lever the higher the speed. The maximum speed will be the speed that you preset with the speed controller. Release the lever slowly and you will slow down gently. If you release the throttle lever suddenly at full speed allowing to snap back to its original position the scooter will stop with maximum deceleration and will remain braked at standstill. Practise both procedures until you are used to them.
 - Steering is simple and it is exactly like a bicycle in that you turn the handlebars in the direction in which you wish to move. Make sure you leave a clearance when moving in a curve to allow the back wheels to follow the path of front wheels and do not turn too tightly.
 - When moving in reverse (left throttle lever) you must be more careful. Make sure that you move at a low speed before moving backwards. Please remember that when reversing you will have to steer in the opposite direction. This will take some practice. Try it first on a wide, level area.
-  Please note that for safety reasons the speed of the scooter when reversing is only half of the forward speed.
- When you travel through a tight curve, first turn the handlebars before accelerating. Always approach corners and obstacles in a wide curve and travel slowly and with caution.

4.4 Pushing the scooter

If you want to push the scooter in some situations, you will have to unlock the brakes. It is easy to push the scooter with the brakes unlocked.



Caution!
The electro-mechanical brake will not operate.

- Pull the unlocking lever upwards.
- A small jerk will indicate that the drives are now unlocked.
- To lock the brakes simply push the lever down, and it will automatically lock.



For safety reasons the motor drive is locked when the scooter is unlocked for pushing.



Caution! Danger of fatal injury!
The drives must only be unlocked on an even surface.

4.5 Action in emergency situations

If your scooter is overloaded (long steep inclines), it may stop suddenly. The cause of this in most cases is that the circuit-breaker has tripped.

Wait about two minutes and then press the main circuit-breaker button, which is on the left under the battery cover.

Also check the following:

- the battery is charged
- the unlock lever is in the correct position
- all electrical connections


If you cannot correct the fault please contact your dealer.



fig. 15



fig. 16

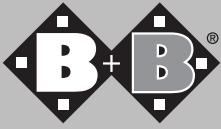

5. Technical data

Dimensions and weights

Max. load capacity (kg):	150
Seat width (cm):	48
Seat height from foot rest (cm):	40 / 43 / 46
Seat back height (cm):	47
Seat back angle (°):	can be limited to 105, 120, 135, 150
Overall length (cm):	150
Overall width (cm):	66.5
Unloaded weight (kg):	112.5

Tyres

Drive wheels (mm):	ø 4.00-5 (3.5 bar)
LSteering wheels (mm):	ø 4.00-5 (3.5 bar)

Electrical system

Main fuse (A):	55
Battery:	2 x 12V / 50 Ah (gel)
Battery charger:	24VDC / 5A
Motor:	DC 24 V / 700W
Controller:	P&G Solo 110A
Lights and indicators:	as required by German traffic regulations

Driving characteristics

Speed (km/h):	max. 15
Climbing capacity (°):	12
Obstacle height (mm):	35
Range (km): approx.	40
Turning circle (cm)::	137

Equipment

Frame:	powder-coated steel frame
Panels:	plasticf
Suspension front/rear:	independent/spring arm
Brakes:	2 independent braking systems as required by German traffic regulation VZO

6. Care instructions for the user

6.1 Cleaning and disinfection

Make sure that the scooter is switched off before starting to clean it.

- The frame components and panels of the scooter can be wiped with a moist cloth. Use a mild cleaning agent if they are very dirty.
- The wheels can be cleaned with a moist brush with plastic bristles (do not use a wire brush)
- Use a moist cloth to clean the seat, the back rest, the head rest and the arm rests from dust and minor dirt. Do not use aggressive cleaning agents, because they may attack the surface of the synthetic leather. The upholstery can be cleaned with warm water at about 40 °C and can be disinfected with a standard disinfectant.
- Please note that electrical and electronic components must not come into contact with water unnecessarily.



Caution! Do not use a pressure cleaner
or a steam cleaner

6.2 Checking the brake system

The motor brake operates correctly if you cannot move the scooter when it is switched off.

However, if it can be moved, the electromagnetic brake is faulty. Do not use the scooter in these circumstances. Contact your dealer immediately.

6.2.1 Motor brake

The drum brake can be used for braking and parking when the scooter is pushed.

- To lock the brake simply pull the brake lever and push the locking lever upwards.
- To release the parking brake, just pull the brake lever briefly. (This will release the lock.)

For an optimum braking effect the braking force is adjusted with the adjustment screw. The braking force is increased by unscrewing the adjustment screw and reduced by screwing it in.

6.2.2 Drum brake

Every time you use the scooter check that the brake system operates. Start up slowly and then release the brake lever.

The scooter must come to a stop in the normal manner. When stopped the electromagnetic brake must lock with an audible click. If you detect abnormal braking behaviour, contact your dealer immediately and do not use the scooter.

- To adjust the drum brake set the scooter in push mode, remove the seat and the rear cover and tilt it to the side so the brake points up.
- Unscrew the adjustment screw until you can hear friction as the wheel rotates.

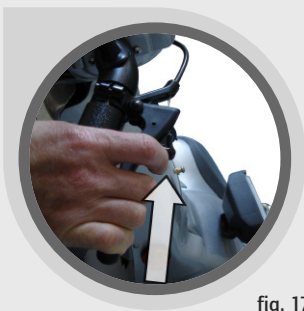


fig. 17

- Screw in the adjustment screw until you can no longer hear the noise. The wheel will rotate freely.
- Once the adjustment has been made, lock the adjustment screw by tightening the locknut

6.3 Lighting system

Every time you use the scooter check that the lighting system, indicators and horn operate correctly.

If one of the above items does not respond to the switch when it is actuated, inform your dealer immediately and do not use the scooter.

6.4 Battery

Your scooter is fitted with maintenance-free gel batteries. It is not necessary to check fluid levels and they are electronically protected against deep discharge. If your scooter is not used for an extended period, the charger should be connected about every two months to prevent damage to the batteries by deep discharge.

Every time you use the scooter check the battery charge on the battery status display on the control panel. If the display shows red significantly longer than green, do not travel long distances and connect the battery charger to the scooter as soon as possible. The battery status indicator also shows information on the charge. We recommend charging the battery every time the scooter is used.

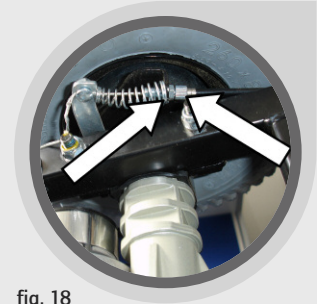


fig. 18

6.4.1 Charging

Charging for the first time:

To charge the batteries to their maximum capacity proceed as follows:

- Discharge the factory-charged batteries until the LED display shows two bars.
- Charge the batteries as described below (approx. 16 h).
- Discharge the batteries again to two bars on the LED indicator.
- Finally charge the batteries as described.

Use only approved battery chargers to charge the batteries (see Technical Data). See the instructions for use for the battery charger.

- Before switching on the battery charger, check that the power supply is 230V.
- Switch off the scooter first.
- Connect the battery charger to the scooter. The charging jack is on the side of the steering column and is covered with a cap (unscrew) for protection.
- Plug the mains plug of the battery charger into the mains socket (230 V) and switch on the charger.
- The charge indicator of the battery charger shows the status of the charging process.

Red – battery charger is switched on

Yellow – charging

Green – charging completed (batteries charged)

- Pull out the mains plug when charging is complete and disconnect the battery charger from the scooter.

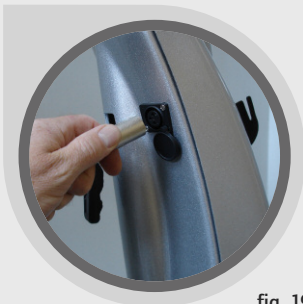


fig. 19

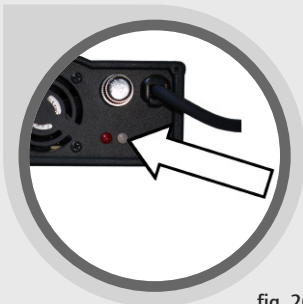


fig. 20

6.4.2 Replacing batteries

Be very careful when working on the batteries. Do not use metal tools, do not touch the battery terminals and follow the battery manufacturer's instructions.



Caution! This work should only be done by a trained technician. There is danger of fatal injury

Use only batteries that are approved for this scooter (see Technical Data).

Make sure that the scooter is switched off before starting to replace the batteries.

- First remove the seat and the back cover.
- Switch off the scooter first.
- Loosen the screws and remove the retainer bar.
- Disconnect the cable (plug contact) to the batteries on the right and left .
- Lift the batteries carefully out by the handles and unscrew the battery cable and connect it to the new batteries.
- Lift the new batteries into position and connect the plug contacts. Pay attention to the correct colour-coding (red and black).
- Replace the cover (do not forget the plug contacts for the rear lights) and replace the seat on the tube.



When the batteries have reached the end of their life, i.e. cannot be sufficiently charged any more, they must not be disposed off with household rubbish. Old batteries are taken by dealer when new batteries are purchased and disposed of correctly.

7. Maintenance instructions for dealers

We recommend a complete inspection of the scooter once a year by the dealer. If the scooter develops any faults or defects it must be repaired by the dealer immediately. The information, documentation and circuit diagrams required for repair and maintenance of the scooter will be supplied on request. A training program is available for dealers. B+B customer service is available to answer questions at + 49 7248 9209-2.

If your scooter is no longer used and is to be discarded, please contact your dealer. If you wish to dispose of the scooter yourself, contact local disposal companies for the disposal regulations of your area.



fig. 21



fig. 22

8. Disposal



Our customer service will supply a service schedule on request.

9. Transfer of the scooter

When transferring the scooter to another own, please remember to give the new owner all technical documentation required for safe operation.



The scooter must be inspected in accordance with the service schedule and must be free from faults.

10. Maintenance

The scooter must be inspected in accordance with the service schedule and must be free from faults.

11. Warranty

The warranty covers all defects of the scooter that can be confirmed to be the result of material or manufacturing defects.

If you make a claim under the warranty, please submit the completed warranty certificate with the claim.



Caution! Non-observance of the operating manual and incorrectly performed maintenance work and particularly technical modifications and additions (attachments) done without the approval of Bischoff & Bischoff will result in the cancellation of the warranty and any general product liability.

Our scooters come with a warranty of five years for the frame components. All other components are guaranteed for two years.

Warranty certificate

(Please note our general business terms and conditions)

Model name: Orbis

Serial number:*

(to be entered by dealer)

Dealer:

Date and stamp

*See the side frame for information sticker

Bischoff & Bischoff GmbH

Becker-Goering-Strasse 13 • D-76307 Karlsbad

Tel.: +49 700/6000 7070 • Fax: +49 700/6000 8080

www.bischoff-bischoff.com

info@bischoff-bischoff.de

